



Wireless – G USB Adapter

Quick Installation Guide

Model # AWN-USB-54R

Contents

1. Install Driver	2
1.1 For Windows XP & Windows 2000.....	2
1.2 For Windows ME & Windows 98SE	2
1.3 For Windows Vista	3

1. Install Driver

1.1 For Windows XP & Windows 2000

Step1: Inset Wireless LAN USB Adapter Installation CD into CD-ROM drive then windows below will appear. Click **Install Driver Utility** to begin Driver Installation.

Step2: After click **Install Driver Utility**, the Choose Setup Language windows will show. Select the language or the installation from the choices below and then click **Next** to continue.

Step 3: Welcome windows will show as below, please click **Next** to continue.

Step 4: Please wait for while during setup program is configuring.

Step 5: Now searching for Hardware and installing Drivers.

Step 6: Click **Continue Anyway** while below two windows are shown.

Step 7: Click **Finish** to complete installation.

1.2 For Windows ME & Windows 98SE

Step1: Inset Wireless LAN USB Adapter Installation CD into CD-ROM drive and then windows below will appear. Click **Install Driver Utility** to begin Driver Installation.

Step2: After click **Install Driver Utility**, the Choose Setup Language windows will show. Select the language or the installation from the choices below and then click **Next** to continue.

Step 3: Welcome windows will show as below, please click **Next** to continue.

Step 4: Please wait for while during setup program is configuring.

Step 5: Now searching for Hardware and installing Drivers.

Step 6: After setup has finished, click "**Finish**" to exit the wizard.

Step 7: You must restart your computer to complete the device configuration. Select **Yes, I want to restart my computer now** and click **OK** Button.

1.3 For Windows Vista

Step1: Inset Wireless LAN USB Adapter Installation CD into CD-ROM drive then windows below will appear. Click **Install Driver Utility** to begin Driver Installation.

Step2: After click **Install Driver Utility**, the Choose Setup Language windows will show. Select the language or the installation from the choices below and then click **Next** to continue.

Step3: Welcome windows will show as below, please click **Next** to continue.

Step4: Please wait for while during setup program is configuring.

Step5: Choose **Install this drive software anyway** and continue the next step.

Step6: Please wait for while during the driver install process.

Step7: Choose **Install this drive software anyway** and continue the next step.

Step8: Click **Finish** to complete installation.

Step9: After setup your device, Windows System will pop-up the message and asks you to restart your computer for finishing set up your new hardware. Please click **YES, I want to restart my computer now** to restart again.

Step10: After you restart your computer, please go to **Start → Control Panel**.

Step11: Select "**Network and Sharing Center**".

Step12: In the right panel, choose "**Manage network connections**".

Step13: Right-click the **Wireless Network Connection 2** (which is indicated "**Realtek RTL8187B Wireless 802.11g 54Mbps USB 2.0 Network Adapter #2**") and choose "**Connect/Disconnect**".

Step14: Select an available network to connect.

Step15: Type the network security key or password if it is necessary.

Step16: Please wait for connecting the selected network.

Step17: After successfully connected to the network, click "**Close**" to exit this wizard.

Step18: Back to **Network and Sharing Center**, you will see the computer has been connected to the Internet.